

## Skidoo/lynx Halo Install

To install your Ski-Doo/Lynx Halo lights, follow these clear and straightforward steps:

1. **Remove Hood:** Carefully take off the hood of your Ski-Doo/Lynx to access the internal components.
2. **Access Light Housing:** Remove the insulation found underneath the hood to reveal the light housing.
3. **Detach Light Housing:** Carefully remove the entire light housing for easier installation of the Halos.
4. **Conceal Wiring:** Run the Halo wires between the light and its housing to keep them hidden and organized.
5. **Prepare Surface:** Clean the light area with alcohol to ensure a clean surface for the Halos. This ensures better adhesion.
6. **Attach Halos:** Apply the Halos to the cleaned light housing. Make sure they are securely attached.
7. **Organize Excess Wiring:** Bundle any extra wiring from the Halos to keep the installation neat and avoid interference.
8. **Connect to Control Box:** Attach the light wiring from the Halos to the control box. All wires should be neatly tucked behind the light housing to maintain a clean look.
9. **Power Connection:** Run the power wire and ground towards the glove box. Locate the two-wire accessory plug, typically found in the corner of the glove box.
10. **Wire Integration:** You have options here – either use a plug pigtail, a Y-splitter, or a scotch lock to splice into the wires securely.
11. **Final Check:** Once installed, your Halos will illuminate whenever the machine is running, enhancing visibility and style.

These steps will guide you through a smooth installation process, ensuring your Halos are set up correctly for optimal performance and appearance.